



## Stacker Serial Communications

This guide will help you determine if your stacker has the necessary components to communicate serially.



The Stacker should be connected to a junction box (J-BOX)

The J-Box is often gray in color and approximately 12" X 12".

*(older non-compatible boxes are smaller)*

Inside the Stacker you should find a 4-port serial communications card in the card-cage.

*Most often it is on the left-hand side of the card cage.*

You should also see a breakout panel (orange) on the side.

